 
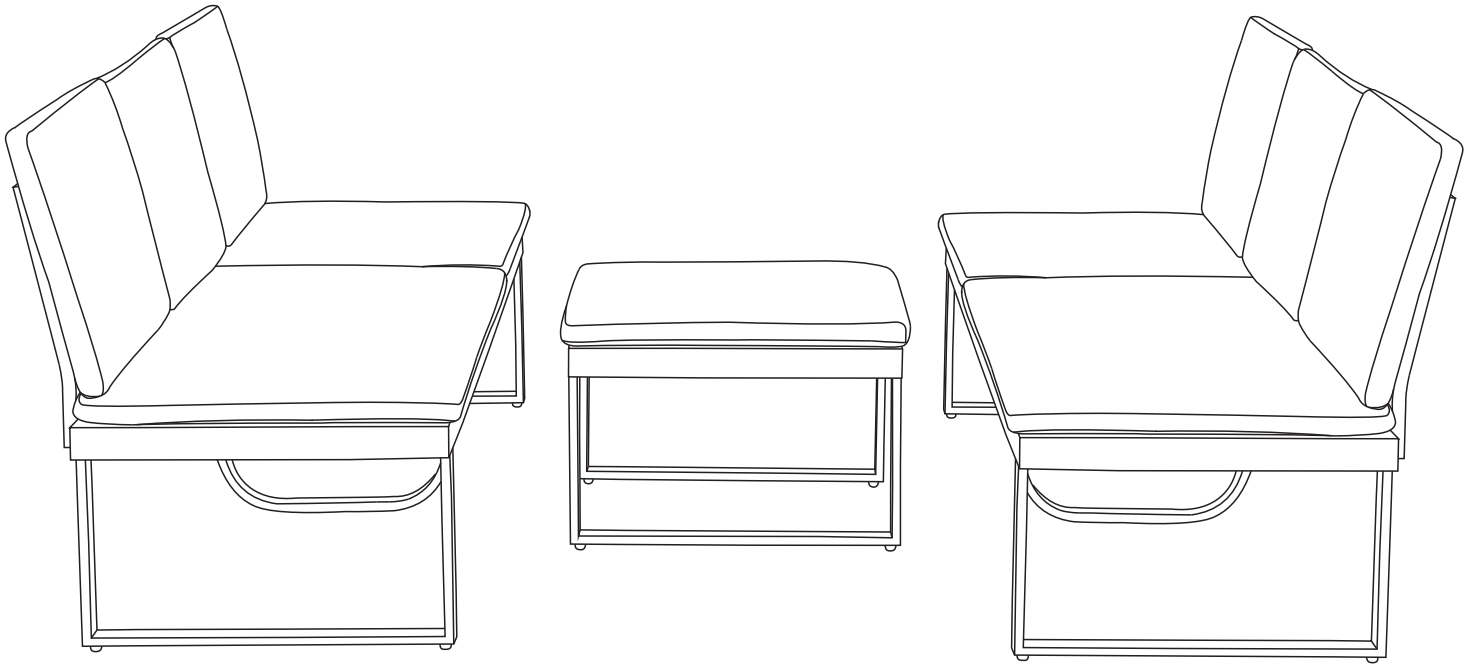 
 



Samlevejledning



FLEX SÆT LOUNGE MØBEL

A  x2	B  x6	C  x6	D  x2	E  x2
F  x2	G  x6	H  x1	I  x1	AA  (M6) x32
BB  (M6*20) x32	CC  (φ6*12) x32	DD  x1		
FLEX SÆT LOUNGE MØBEL 1/7				

 01



Ax2



Cx4



(M6)
AAx16

 


(M6*20)
BBx16



(φ6*12)
CCx16

Vent med at stramme skruer helt, til hele produktet er samlet.

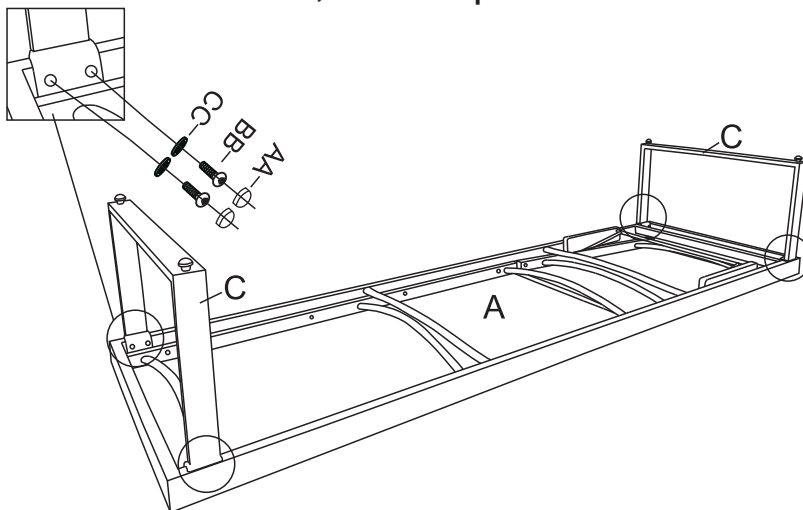

x 2

02



Dx2



 
(M6)
AAx8



(M6*20)
BBx8



(φ6*12)
CCx8

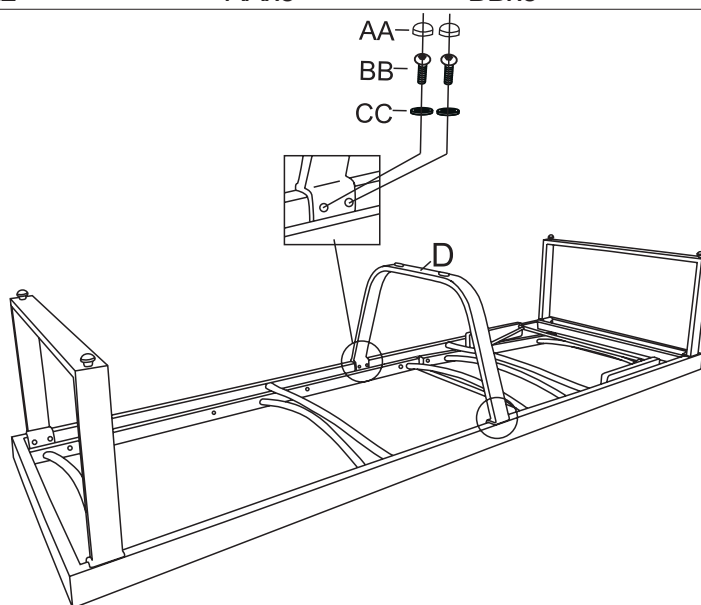


x 2

03



 Bx6

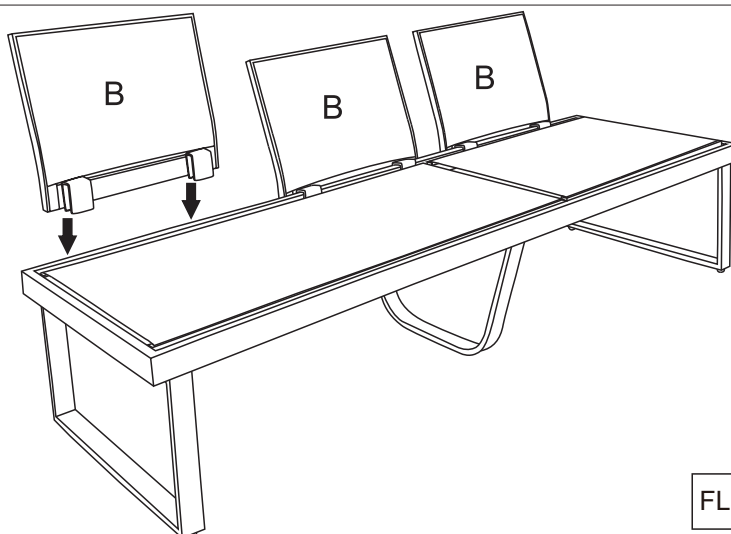

x 2

04




Ex2



Fx2




 Gx6

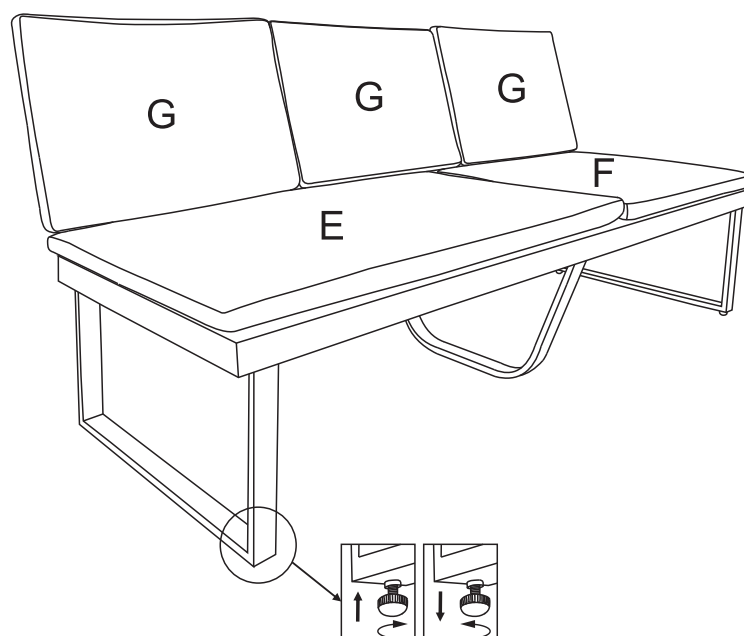

x 2

 05

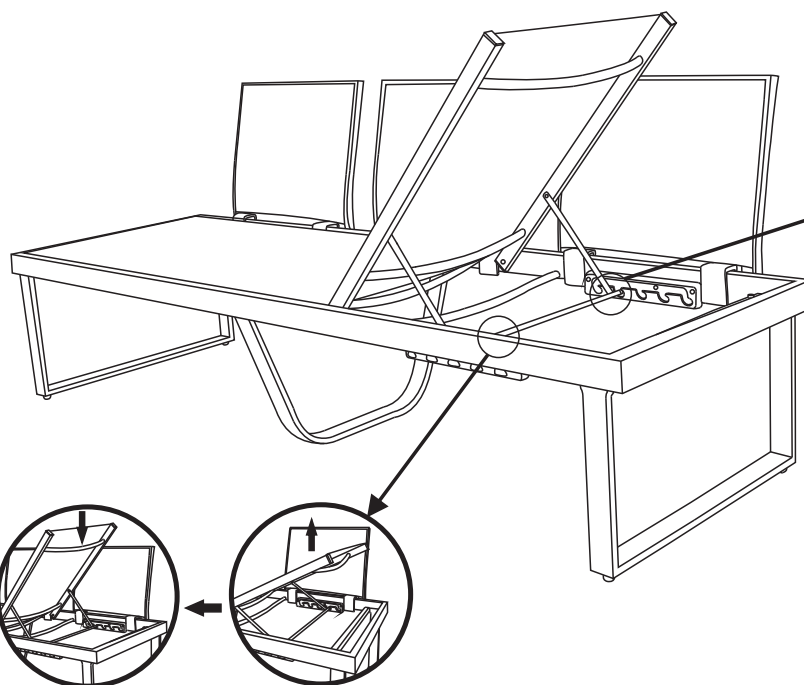

x 2

06



Hx1



Cx2



(M6)
AAx8

 


(M6*20)
BBx8



(φ6*12)
CCx8


Vent med at stramme skruer helt, til hele produktet er samlet.

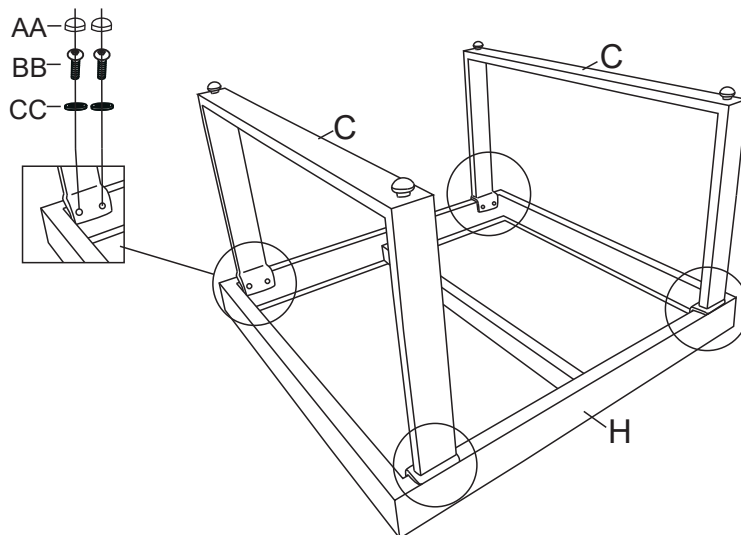


07



 
Ix1

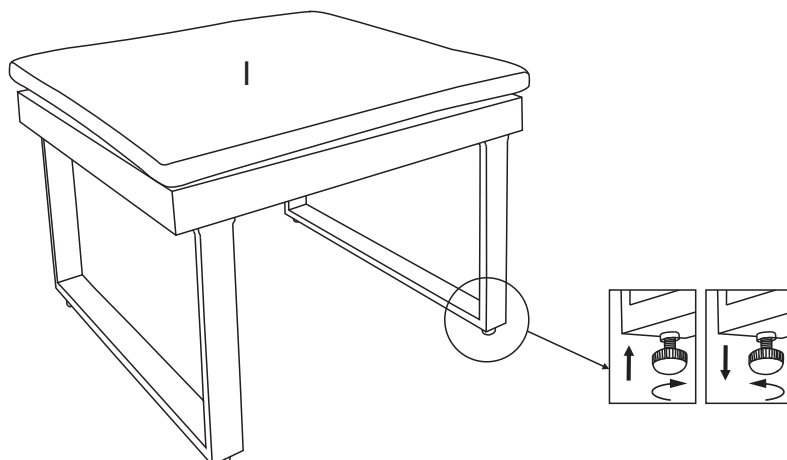


08

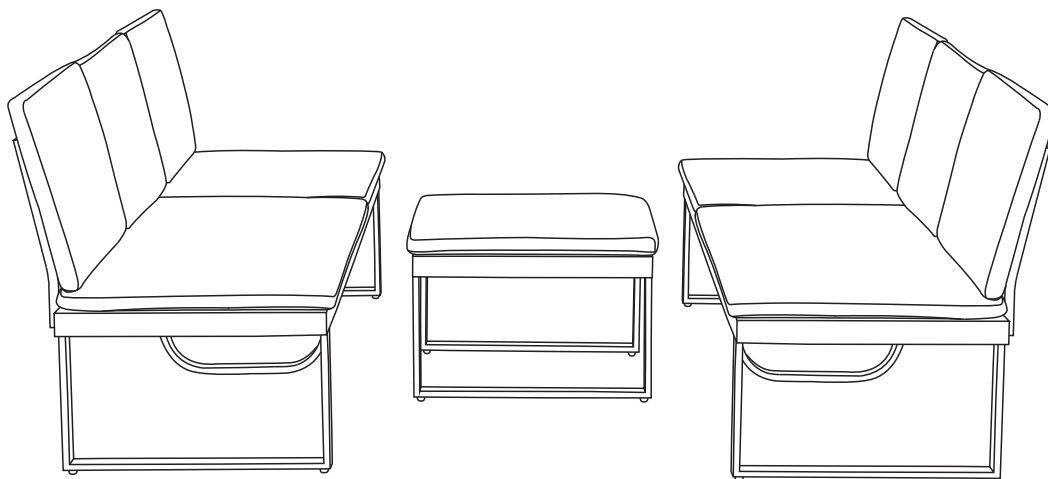 


09

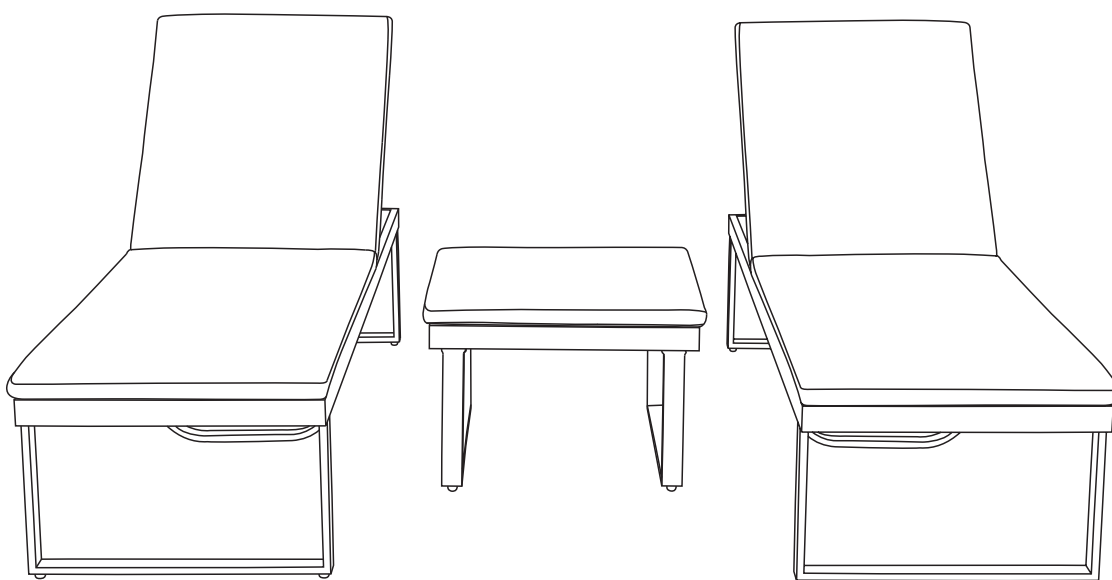 


10

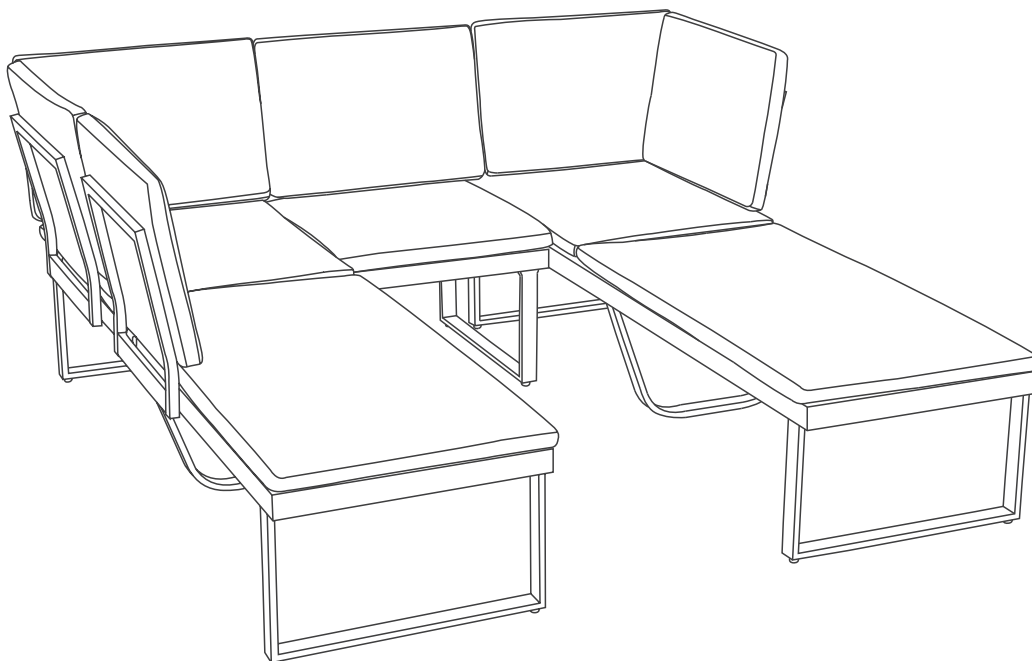 

11

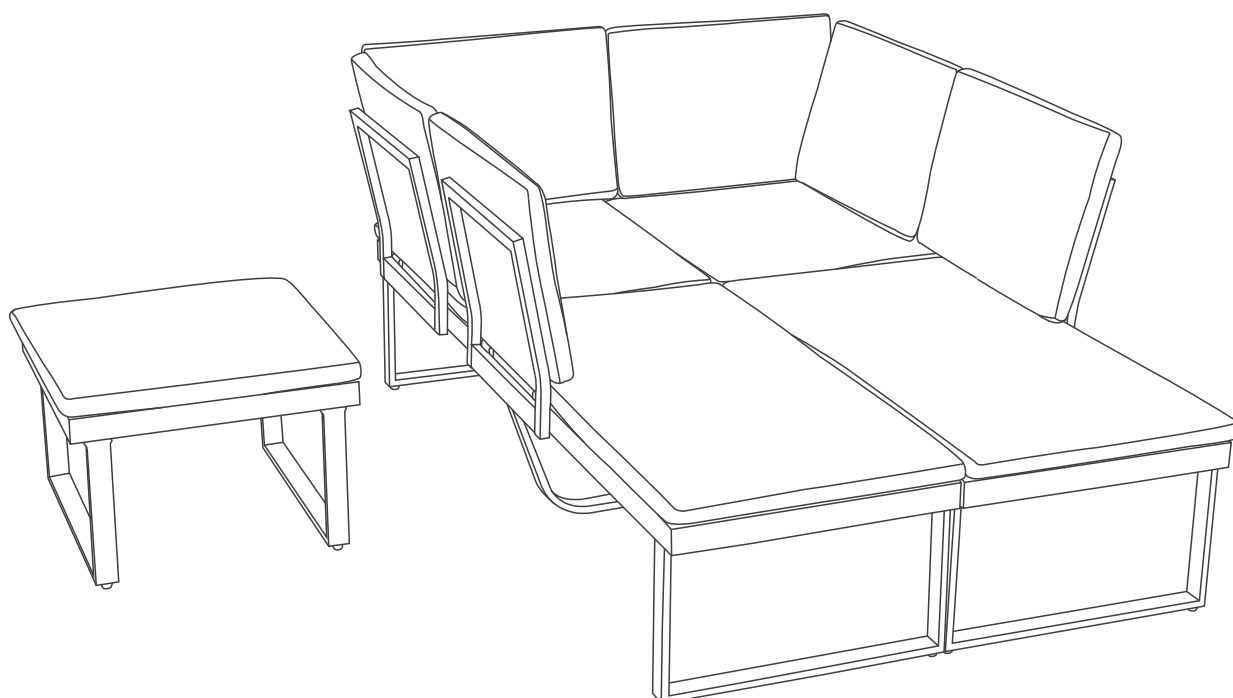 

12

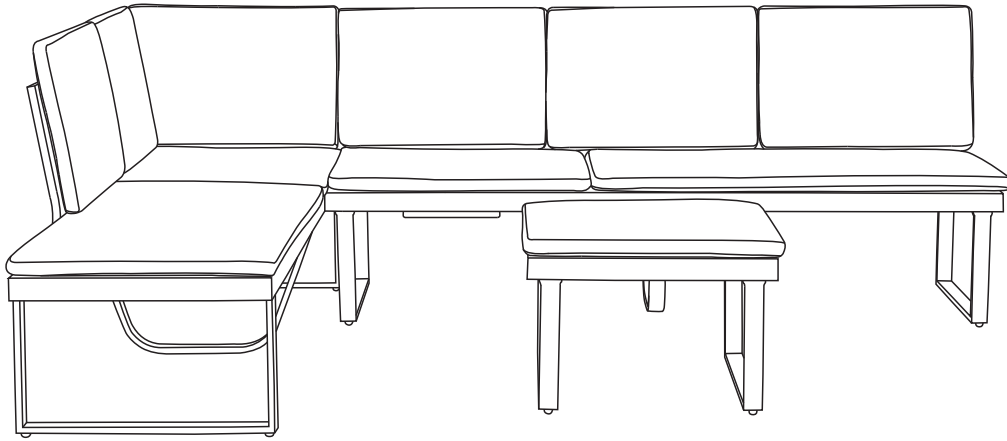 

13

